


CONTROL PANEL PARTS

For Models: KHHS179LWH3, KHHS179LBT3, KHHS179LBL3, KHHS179LSS3
 (White) (Biscuit) (Black) (Stainless Steel)

MICROWAVE
HOOD
COMBINATION

KitchenAid®

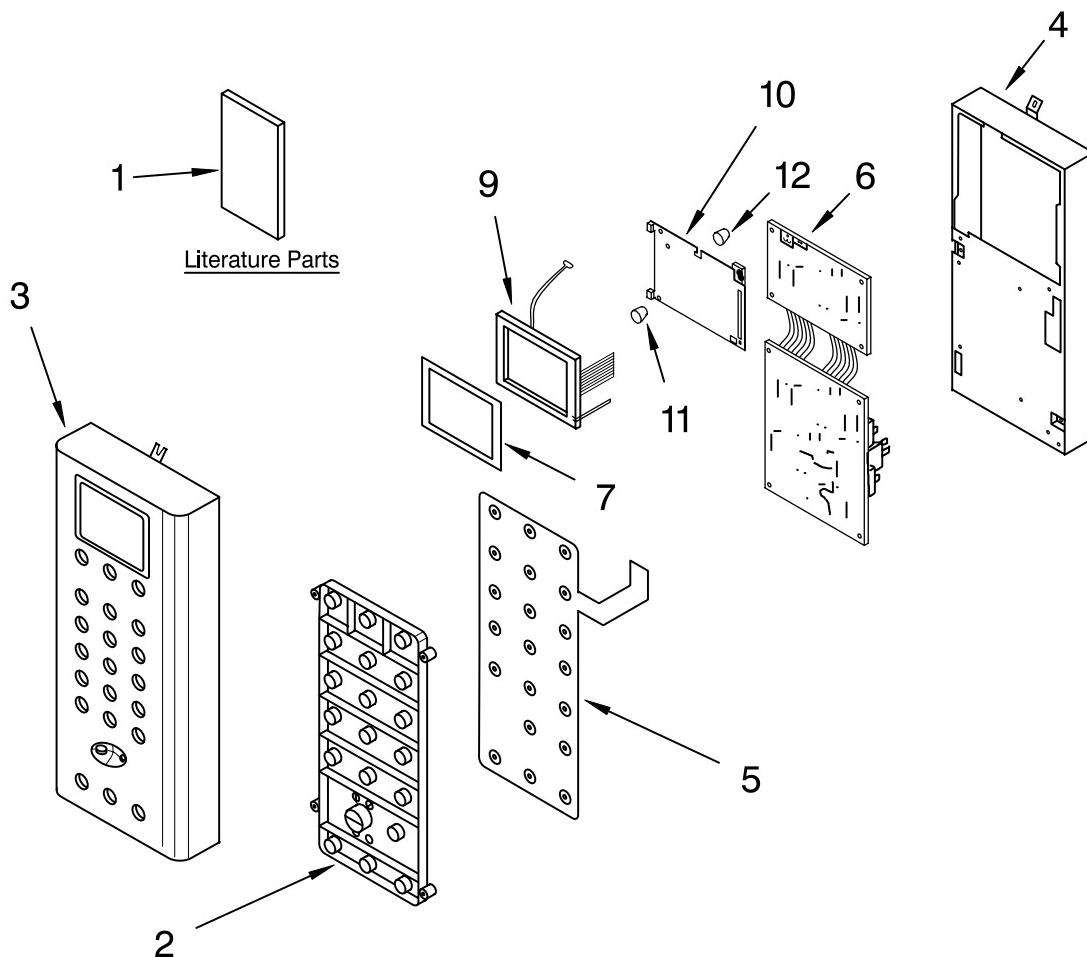


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8204953	Literature Parts Use & Care Guide	2	8205434	Button Assembly White	4	8185174	Bracket, Control
	8205622	Tech Sheet		8205437	Black	5	8185172	Touch Pad
	8205574	Tech Sheet, Insert		8205436	Biscuit	6	8205423	Microcomputer
	8184059	Installation Instructions		8205092	Stainless Control Panel	7	8184913	Ring, Rubber
	8184803	Cook Book	3	8185164	White	9	8204689	LCD Assembly
	8184723	Cook Guide Label		8185167	Black	10	8184915	Bracket, LCD
				8185166	Biscuit	11	8185058	Bushing, Rubber
				8185165	Stainless	12	8184919	Sensor, Light Lens

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: KHHS179LWH3, KHHS179LBT3, KHHS179LBL3, KHHS179LSS3
 (White) (Biscuit) (Black) (Stainless Steel)

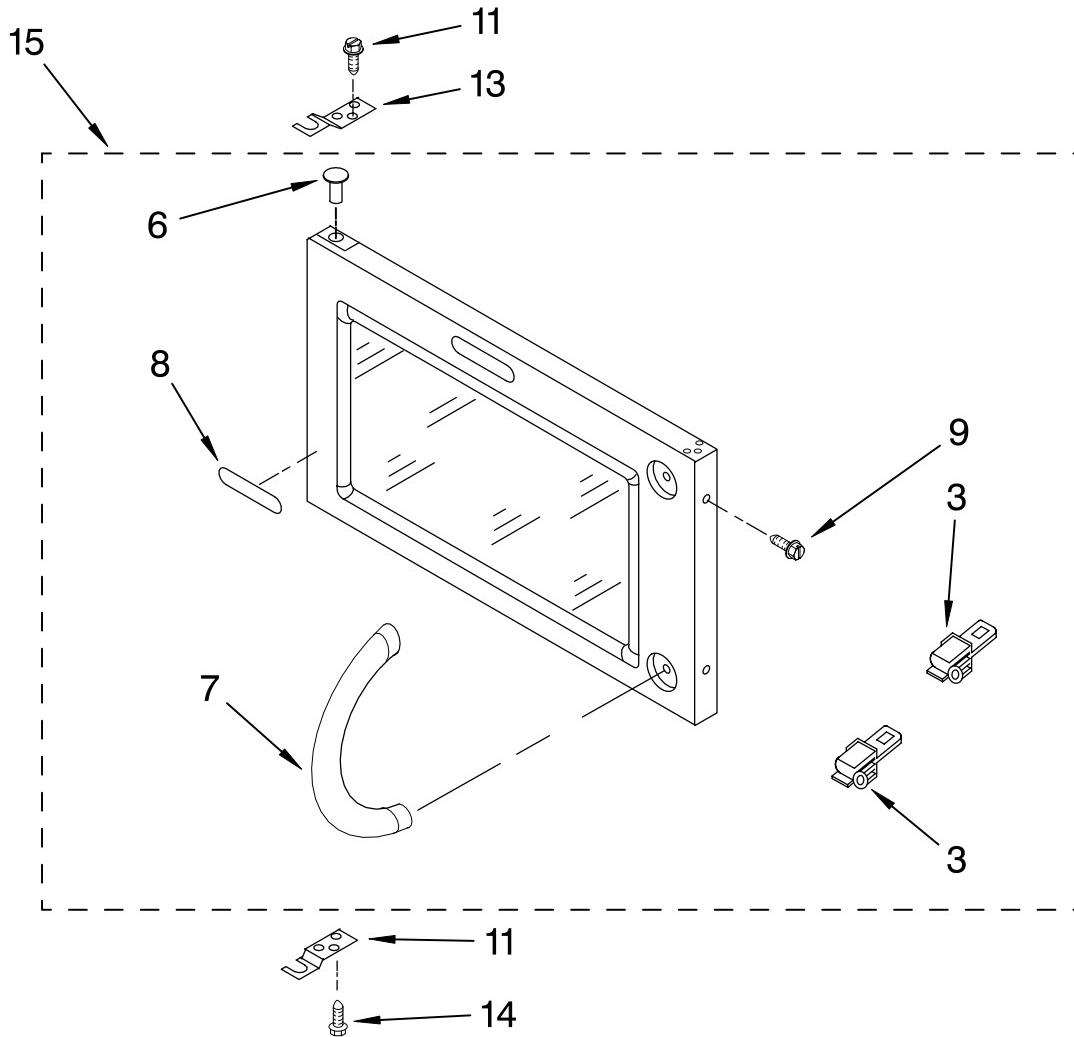


<u>Illus.</u>	<u>Part</u>	
<u>No.</u>	<u>No.</u>	<u>DESCRIPTION</u>

3	8184113	Latch, Door
6	8184922	Pivot, Door
7		Handle
	8205431	White
	8205433	Black
	8205432	Biscuit
	8185156	Stainless
8	8185157	Nameplate
9	8169479	Screw
11	8205438	Screw
13	8204679	Hinge, Upper
14	8204678	Hinge, Lower
15		Complete Door
	8185160	White
	8185163	Black
	8185162	Biscuit
	8185161	Stainless Steel

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERIOR AND VENTILATION PARTS

For Models: KHHS179LWH3, KHHS179LBT3, KHHS179LBL3, KHHS179LSS3
 (White) (Biscuit) (Black) (Stainless Steel)

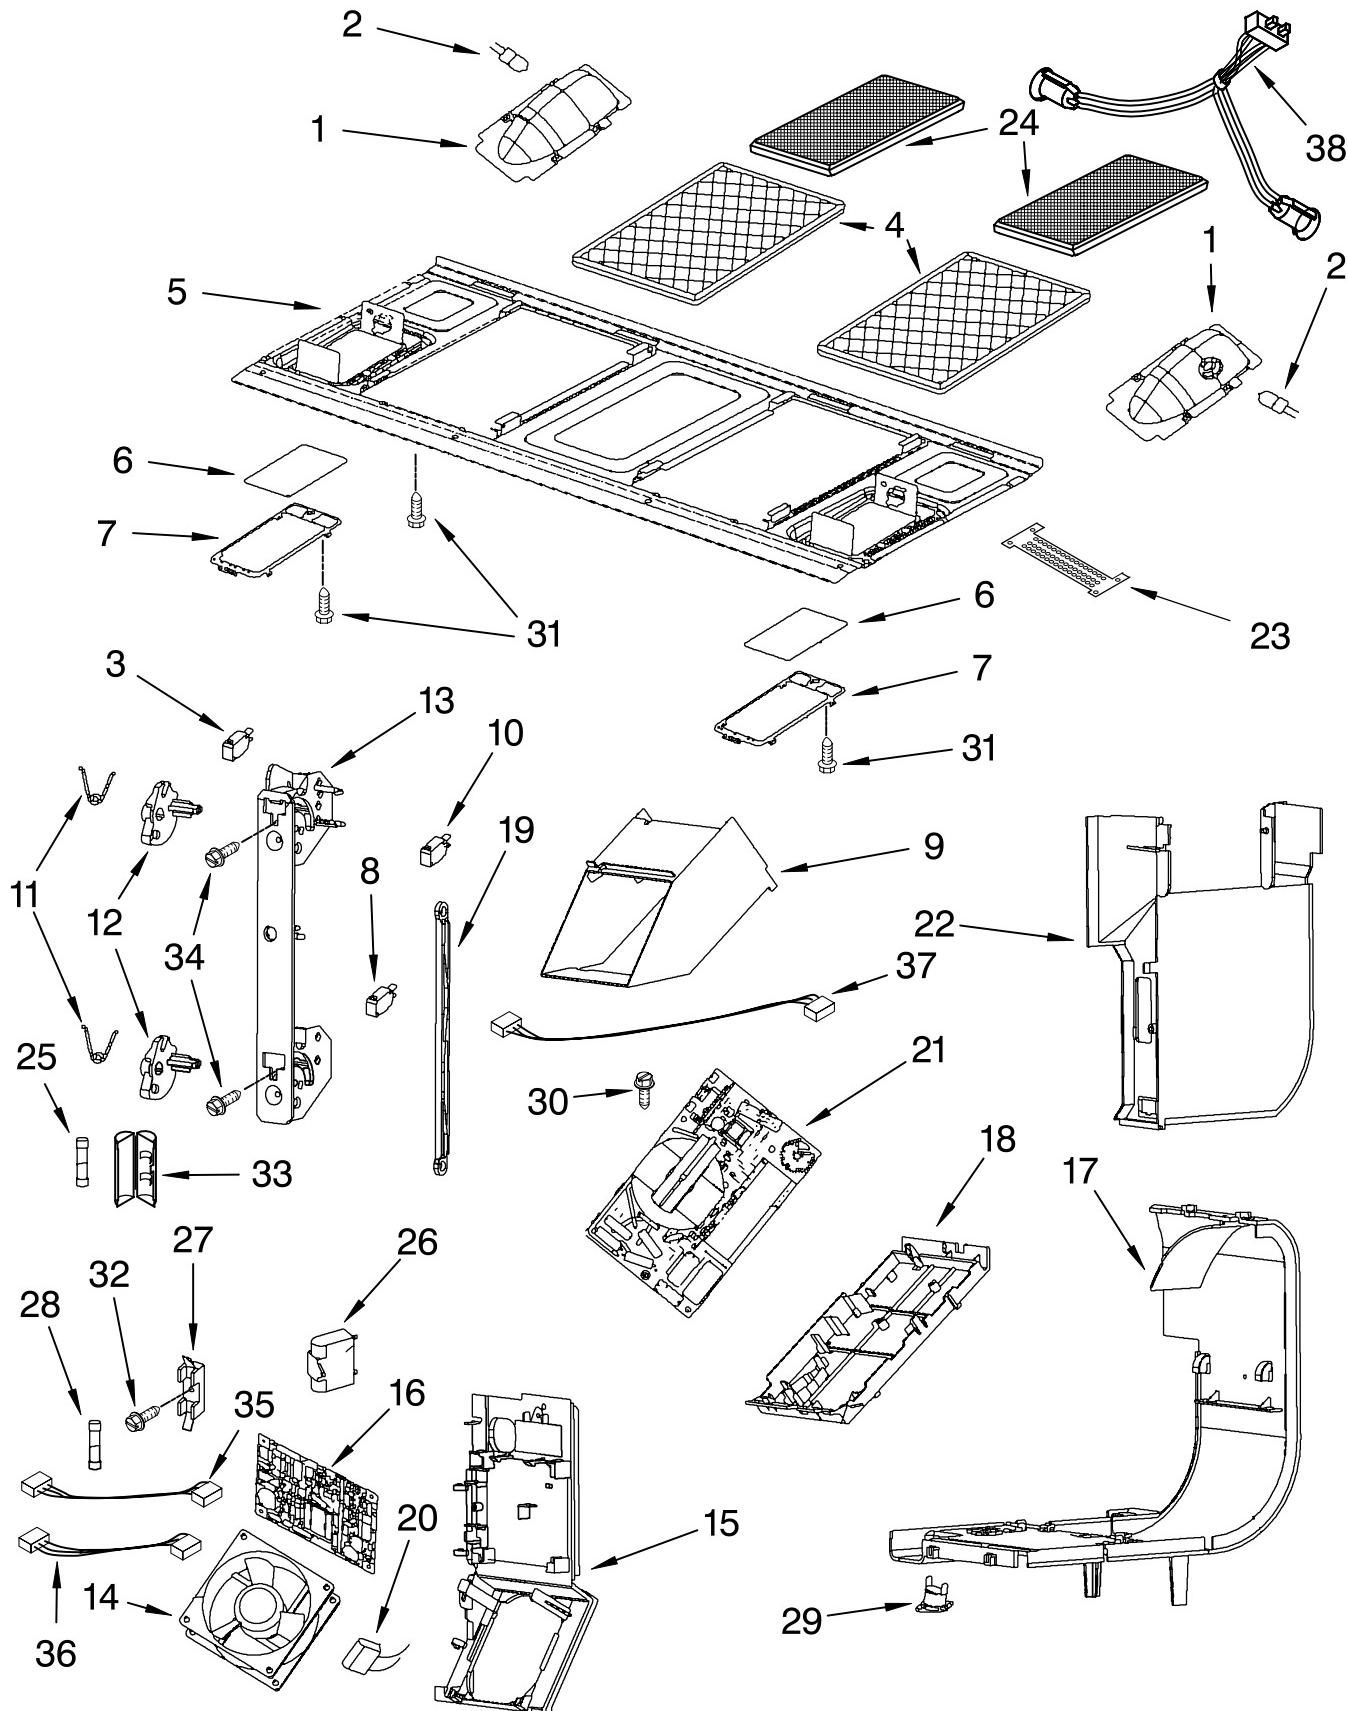

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERIOR AND VENTILATION PARTS


For Models: KHHS179LWH3, KHHS179LBT3, KHHS179LBL3, KHHS179LSS3
(White) (Biscuit) (Black) (Stainless Steel)

Illus. No.	Part No.	DESCRIPTION
1	8184194	Reflector, Lamp Left
	8184132	Right
2	8204670	Lamp
3	4393598	Switch, Micro
4	8184003	Filter, Grease
5	8205381	Plate, Bottom (SS Model)
6	8184141	Glass, Lamp
7	8184889	Holder, Glass
8	4393599	Switch, Micro Primary/Secondary
9	8184124	Cover, Inverter
10	4393697	Switch, Micro
11	8169438	Spring, Interlock
12	8205211	Plate, Cam
13	8185189	Support, Interlock
14	8184875	Fan, DC 12 Volt
15	8184894	Housing, Fan
16	8204989	Inverter 40 W
17	8185032	Bracket, Holder
18	8184670	Holder, Inverter
19	8185190	Rod-Locking Link
20	8184093	Capacitor, 125 V
21	8205093	Inverter 1100 W
22	8185031	Plate, Side
23	8184887	Cable
24	8184002	Filter, Charcoal
25	8184579	Fuse (2) 4 Amp/250 Volt
26	8184204	Capacitor, Motor
27	8184312	Holder, Fuse
28	4393308	Fuse
29	8183998	Thermostat
30	8184199	Screw
31	4393835	Screw
32	8184200	Screw
33	8185177	Fuse Holder (2)
34	8169477	Screw
35	8205021	Ribbon Cable (P27 To CN153 On 40 W Inverter)
36	8205022	Ribbon Cable (P4 To CN151 On 40 W Inverter)
37	8205014	Ribbon Cable (P2 To CN701 On 1100 W Inverter)
38	8184603	Wire Assembly

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

AIR FLOW PARTS

For Models: KHHS179LWH3, KHHS179LBT3, KHHS179LBL3, KHHS179LSS3
 (White) (Biscuit) (Black) (Stainless Steel)

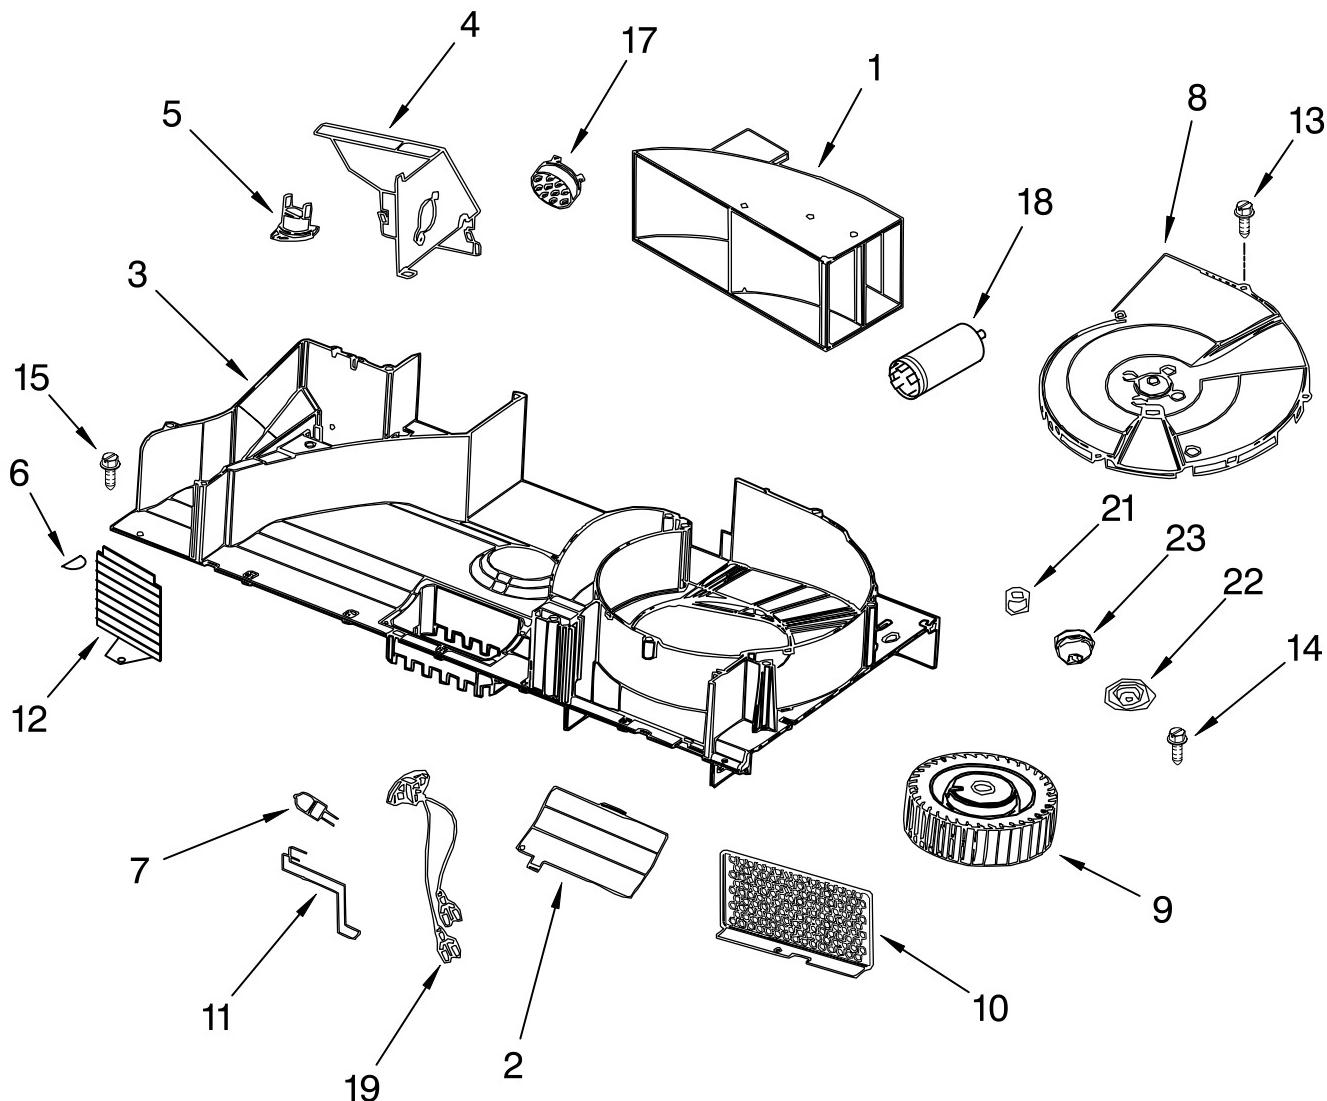


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8184667	Deflector, Air	9	8184876	Motor, Fan Assy	15	8169474	Screw
2	8184885	Cover, Lamp	10	8204754	Shield	17	4393808	Humidity, Sensor
3	8205402	Duct, Air	11	8169647	Spring	18	8205853	Filter
4	8205401	Bracket, Thermostat	12	8204790	Shield	19	8204669	Holder, Lamp
5	8183999	Thermostat	13	4393834	Screw	21	8184129	Spacer-Copper Pipe
6	8204676	Air Guide Cover	14	8184198	Screw	22	8204674	Plate, Damper
7	8185188	Lamp				23	8169635	Cushion, Mtr
8	8184884	Cover, Fan						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MAGNETRON AND TURNTABLE PARTS

For Models: KHHS179LWH3, KHHS179LBT3, KHHS179LBL3, KHHS179LSS3
 (White) (Biscuit) (Black) (Stainless Steel)

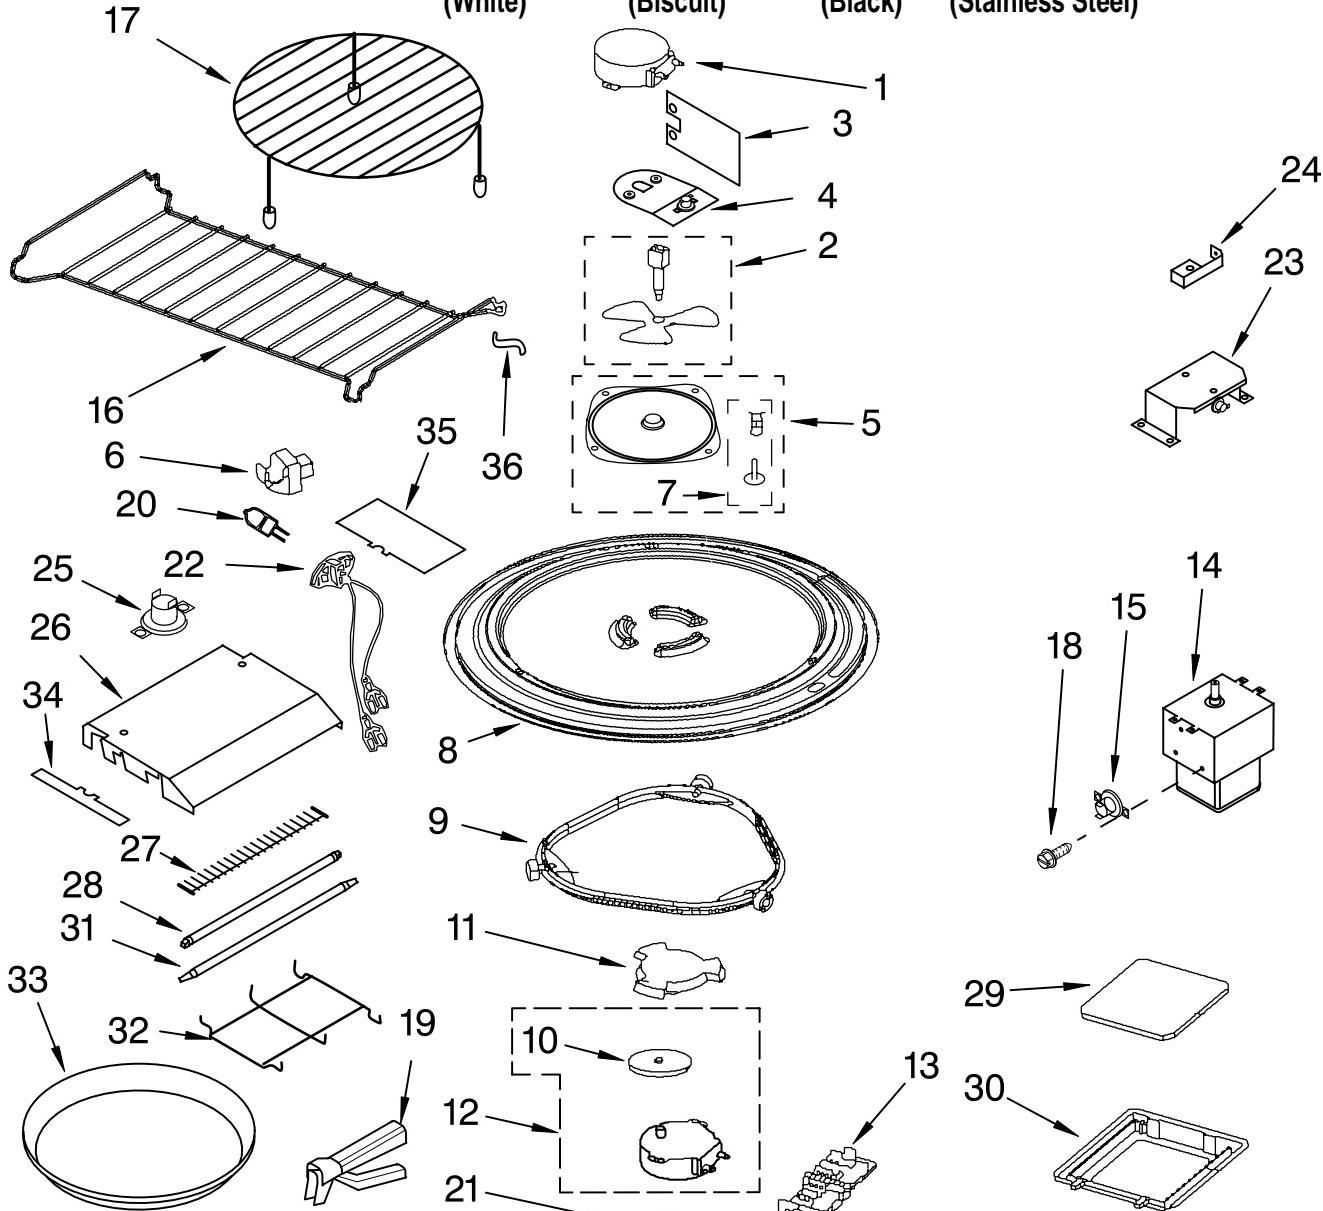


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	4393746	Motor, Stirrer	12	8183953	Motor, Turntable	24	8184669	Bracket, Plug
2	8205202	Stirrer Shaft/Blade	13	4393756	Cover, Terminal	25	8204995	Thermostat
3	8184485	Shield, Nomex	14	8184139	Magnetron	26	8205409	Grill, Insulation Plate
4	8184585	Thermostat/Bracket	15	8184951	Thermostat	27	8184837	Browner, Halogen
5	8185059	Cover, Inlet Includes Nails and Bushings	16	8205042	Rack	28	8184838	Quartz Tube, Soft Start
6	4393849	Hook, Rack (4)	17	8184862	Grill	29	8169499	Glass, Lamp
7	8184549	Nails/Bushings (5 of each)	18	4393838	Screw	30	8169646	Frame, Glass
8	4393799	Turntable	19	8204652	Handle, Crisper Plate	31	8184839	Heater, Quartz
9	8205778	Ring, Turntable	20	8204670	Halogen Light	32	8205239	Cover, Protector
10	8184109	Spacer, Waterproof	21	4393832	Screw	33	8204983	Plate, Crisp
11	8205779	Driver, Turntable	22	8204669	Socket, Halogen Light	34	8185175	Insulation, Front
			23	8184586	Thermostat/Bracket	35	8185176	Insulation, Rear
						36	8205039	Spacer

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET AND INSTALLATION PARTS

For Models: KHHS179LWH3, KHHS179LBT3, KHHS179LBL3, KHHS179LSS3
 (White) (Biscuit) (Black) (Stainless Steel)

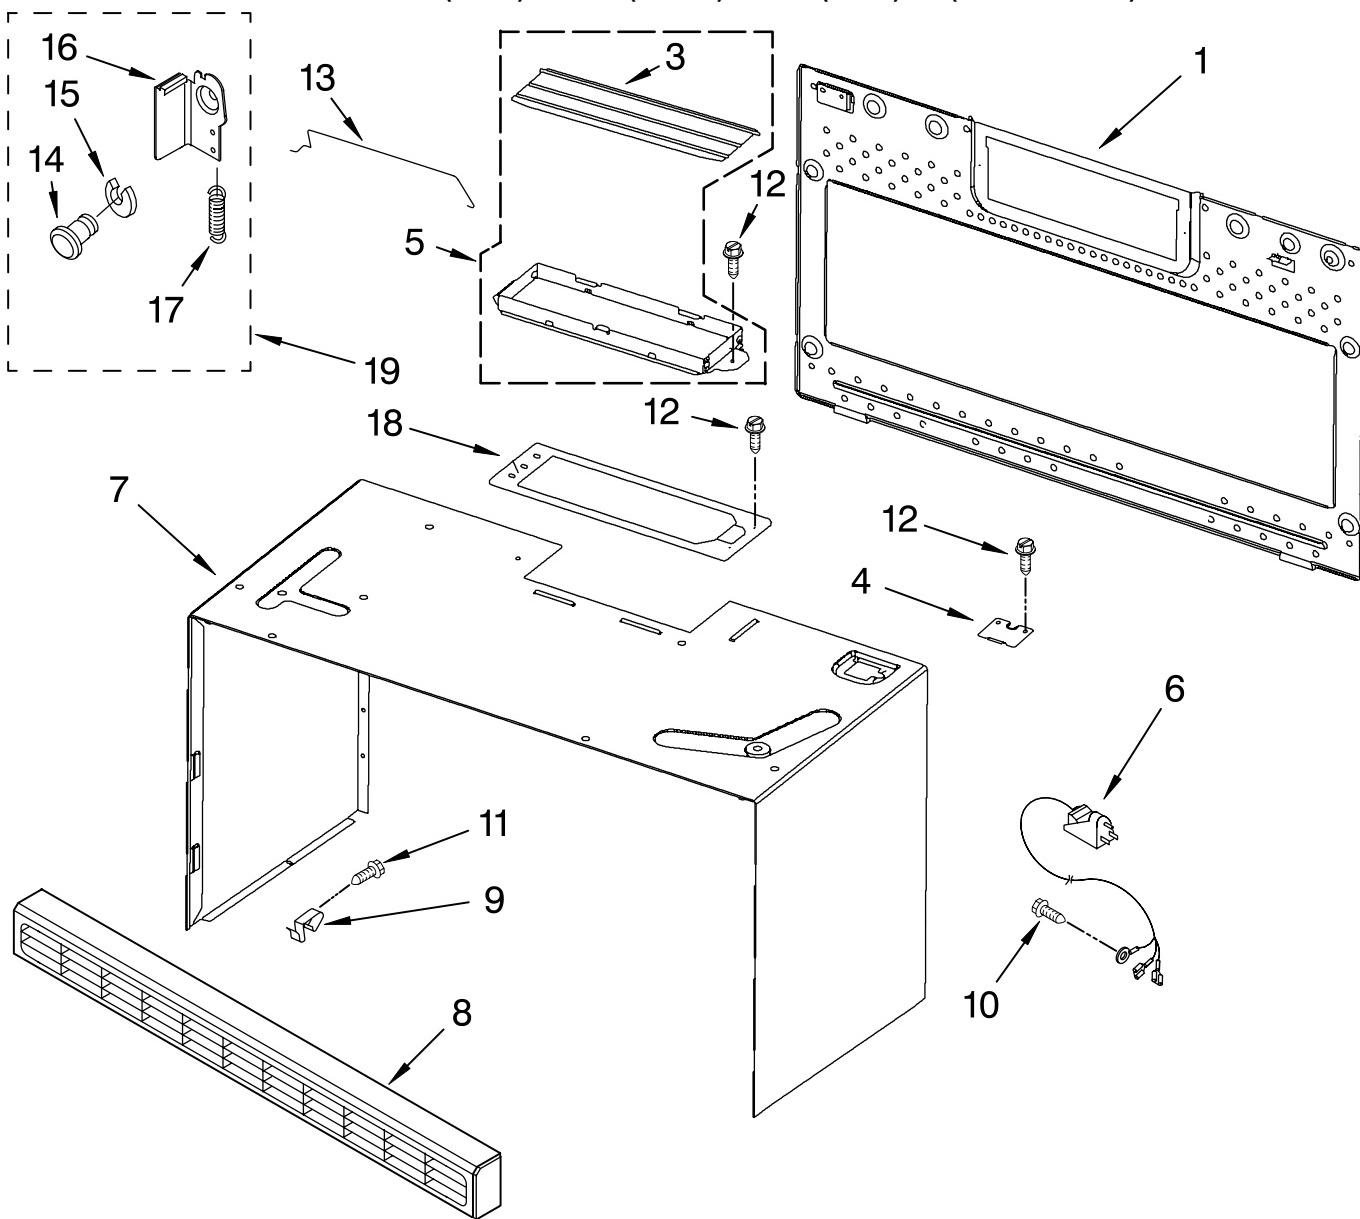

Illus. No.	Part No.	DESCRIPTION
1	8205403	Plate, Mounting
3	4393713	Door, Damper
4	8184897	Lid, Power Cord
5	8205772	Damper Assembly
6	8184898	Cord, Power
7	8205397	Case, Outer White
	8205398	Black
	8205399	Biscuit

Illus. No.	Part No.	DESCRIPTION
8	8205427	Grille, Vent White
	8205430	Black
	8205429	Biscuit
	8205428	Stainless
9	8184190	Clip, Grille
10	4393836	Screw
11	8169475	Screw
12	4393472	Screw
13	8184135	Rod
14	8169319	Pivot
15	8169320	E-Ring
16	8185033	Catch
17	8169374	Spring

Illus. No.	Part No.	DESCRIPTION
18	8184902	Plate, Damper
19	8185033	Catch Assembly

Miscellaneous

- 8169659 Installation, Hardware
- 8184781 Template, Upper
- 8183987 Template, Wall
- 8169704 Screw, Top Mountng
- 8184603 Wire Harness
(Includes light sockets)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST